
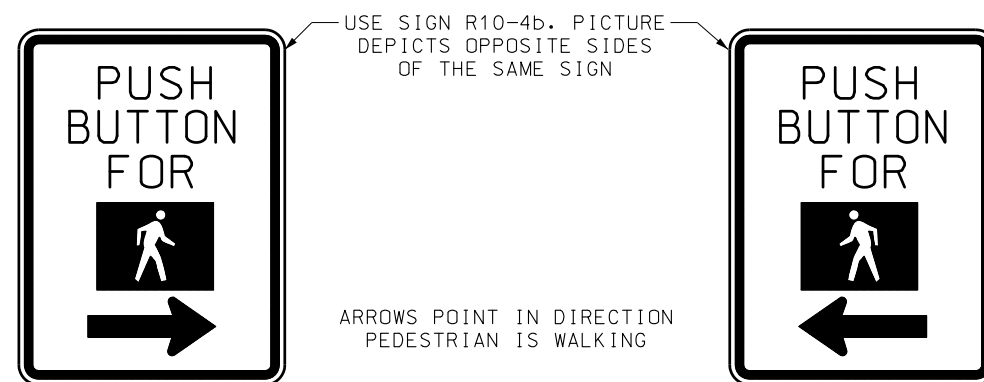
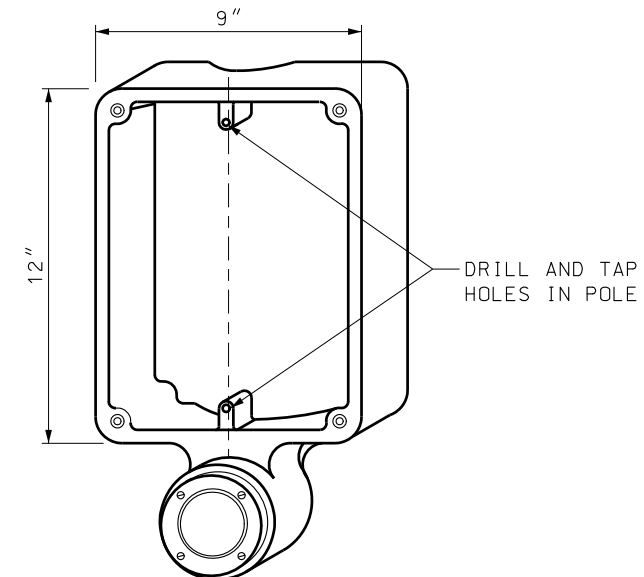
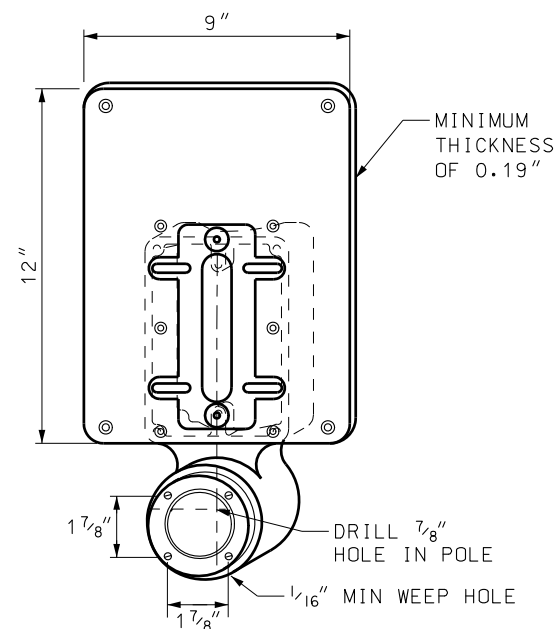


TYPICAL MOUNTING OF PEDESTRIAN SIGNAL
AND PUSH BUTTON ON A SIGNAL POLE

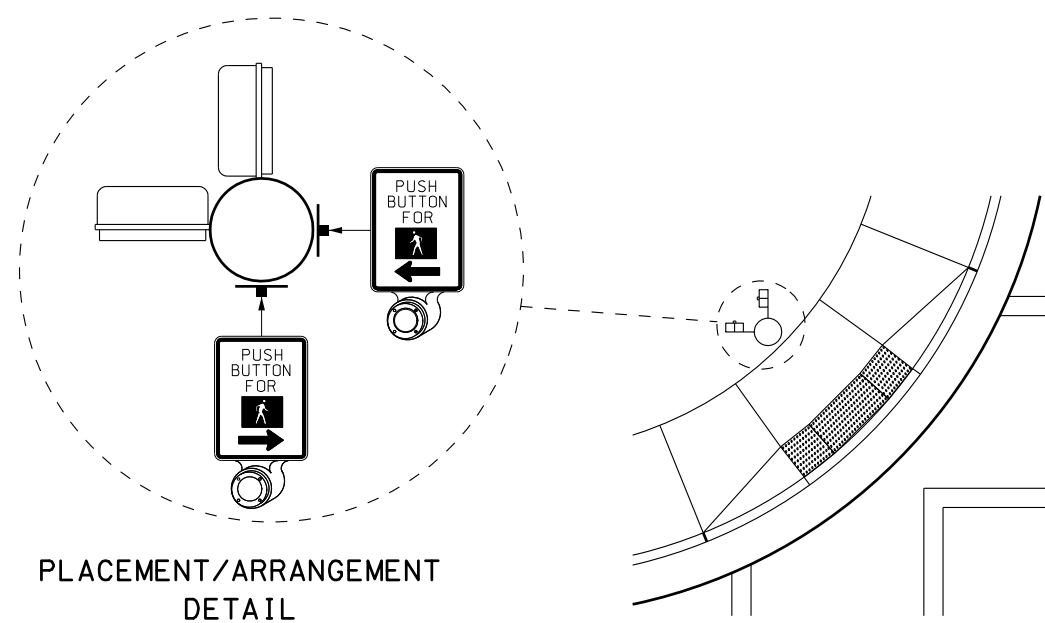

NOTES:

1. MOUNT PEDESTRIAN SIGNALS 9'-3" \pm 6" FROM CONCRETE LANDING TO BOTTOM OF HOUSING.
2. MOUNT PUSH BUTTONS 42" \pm 2" ABOVE CONCRETE LANDING. SEE STD DWG GW 5A, 5B, AND 5C FOR LANDING DETAILS.
3. PLACE PUSH BUTTON AND PEDESTRIAN SIGNAL WITHIN TEN FEET OF THE FRONT OF DETECTABLE WARNING SURFACE, MEASURED FROM THE CENTER OF THE CURB CUT.
4. WHEN USING PEDESTRIAN POLES FOR PUSH BUTTONS AND PEDESTRIAN SIGNALS, USE ONE POLE FOR EACH DIRECTION OF TRAVEL. TWO 9" x 12" SIGN FRAMES WILL NOT FIT ON ONE PEDESTRIAN POLE.

REVISIONS

UTAH DEPARTMENT OF TRANSPORTATION
STANDARD DRAWINGS FOR ROAD AND BRIDGE CONSTRUCTION

SALT LAKE COUNTY

RECOMMENDED FOR APPROVAL

CHAIRMAN STANDARDS COMMITTEE

APPROVED

DEPUTY DIRECTOR

PEDESTRIAN
SIGNAL ASSEMBLY

STD DWG
SL 9

STANDARD DRAWING TITLE

REMARKS

NO. DATE APPR.

JAN.01.2008 DATE

JAN.01.2008 DATE